



LIMITS FIRMWARE UPDATE PROCESS iOS

Step 1 – Download nRF Toolbox to your iPhone, iPad or iPod touch

1. Using your iPhone, iPad or iPod touch click on the Safari icon



2. Search for 'Nordic nrf toolbox app'




3. Select nRF Toolbox from App Store
4. Click on download icon




5. Once download is complete please move to Step 2 on the next page

Step 2 – Share the LIMITS firmware update with your iOS App


1. Copy the LIMITS firmware update file to your desktop
2. Connect your iPhone, iPad, or iPod touch to your computer using the USB cable that came with your device.
3. Click your device in iTunes.

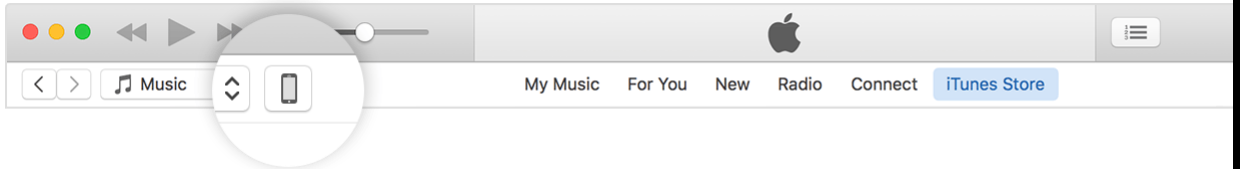

4. In the left sidebar, click Apps. Then, scroll to the File Sharing section at the bottom of the page and select nRF Toolbox.

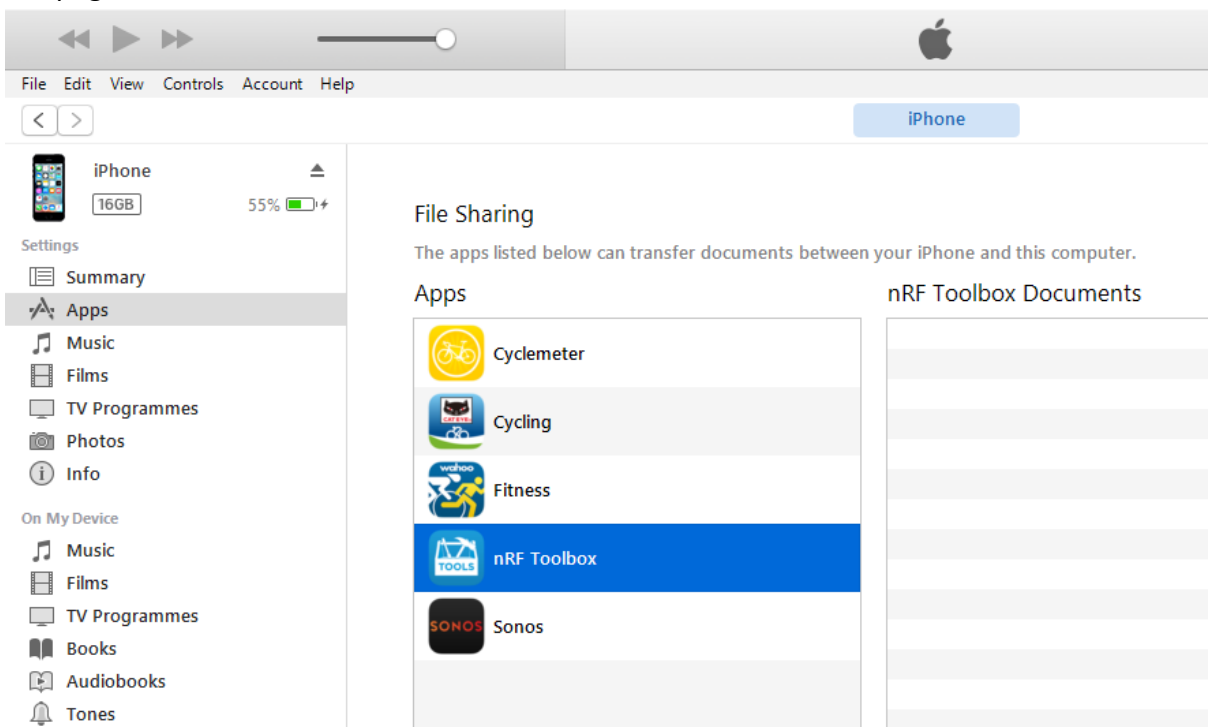

- Click Add File... and browse for and select the LIMITS_Update_vx_x.zip file and click done.

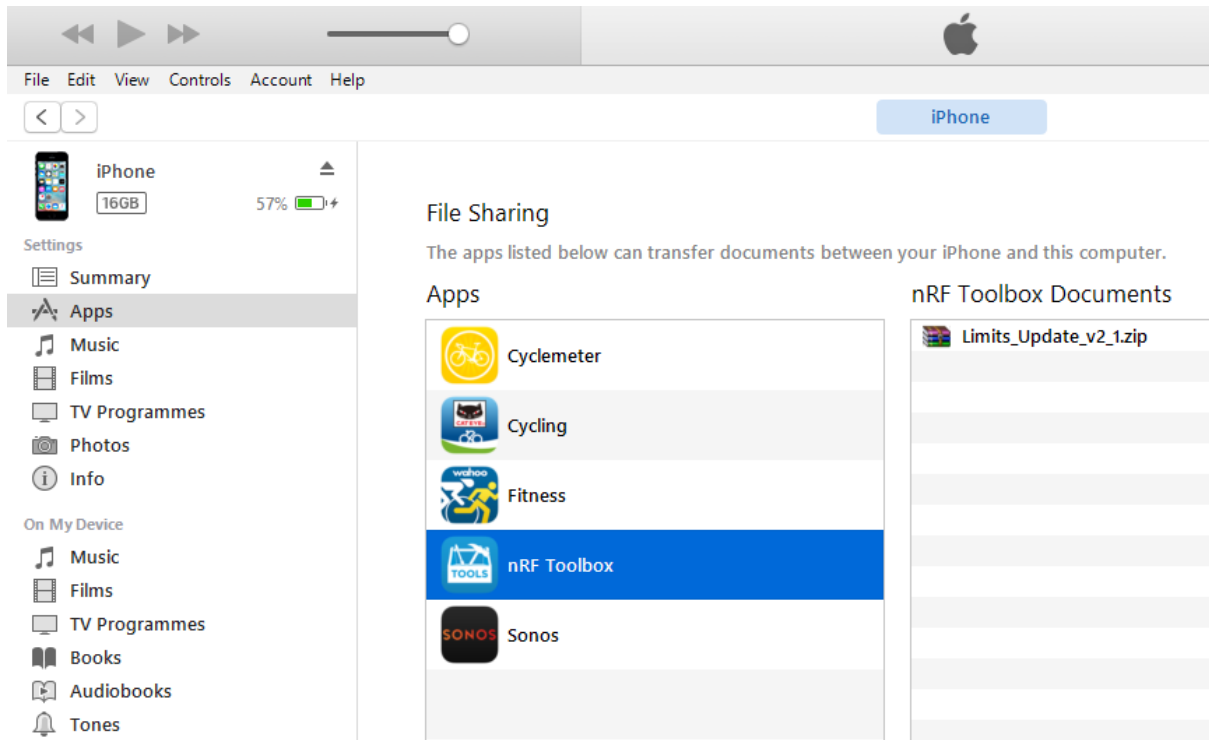

- Once LIMITS_Update file has been uploaded please move to Step 3 on the next page

Step 3 – Update your LIMITS Firmware

1. Select the nRF Toolbox on your iPhone, iPad or iPod touch




2. Select the DFU (Device Firmware Update) icon




DFU


3. Click Select File

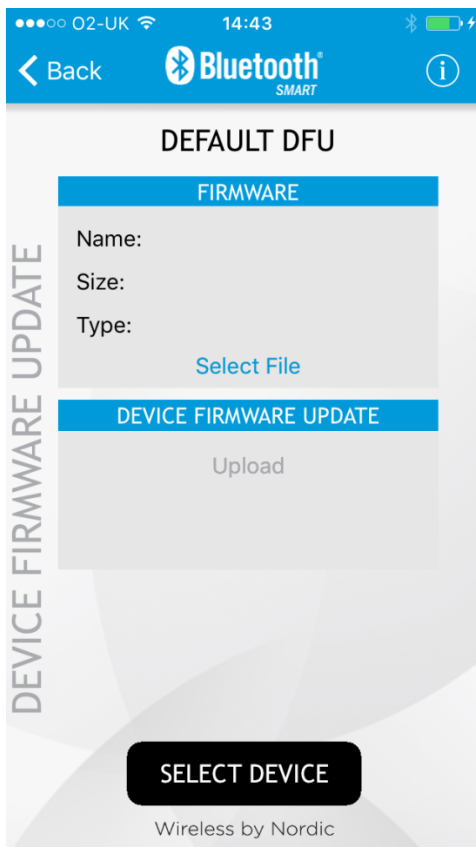


- Click User Files in the bottom right corner, Select LIMITS_Update_vx_x.zip and select Done

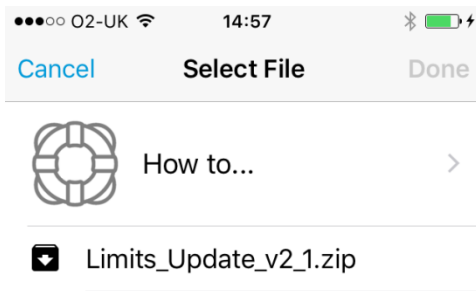


- Power cycle LIMITS – ensure Blue LED is shown and click Select Device

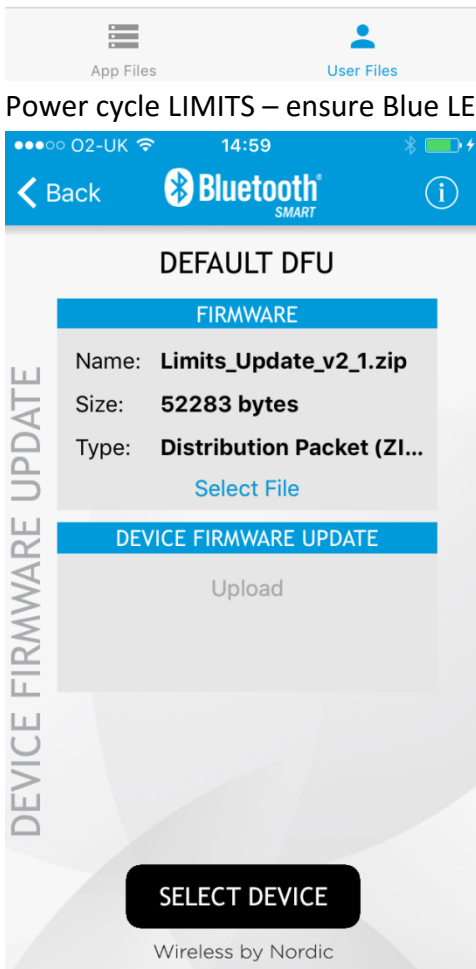


6. Select LIMITS

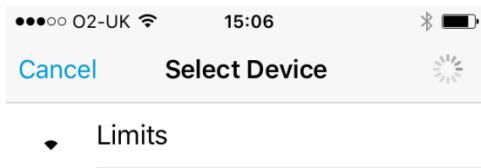


7. Click Upload

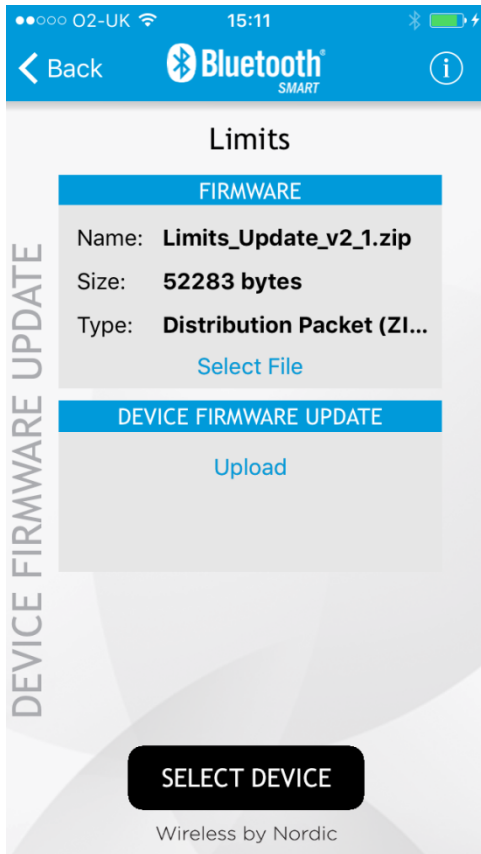

8. The new firmware will now be uploaded to LIMITS

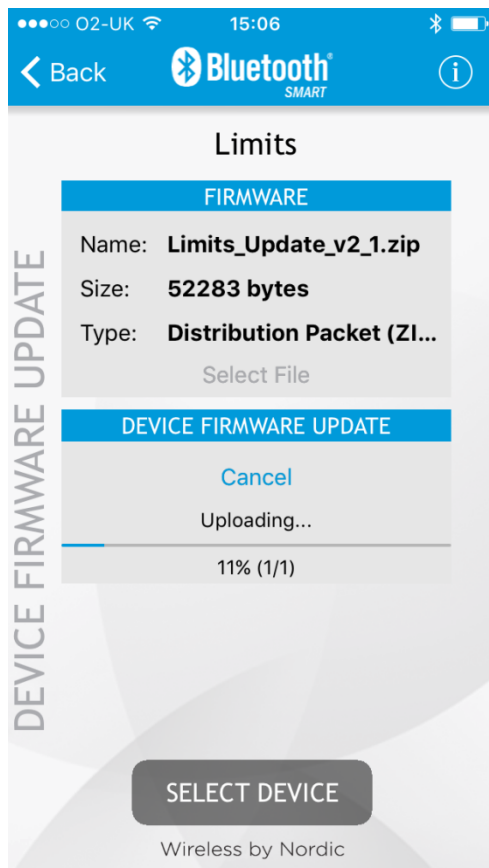

9. On completion click OK

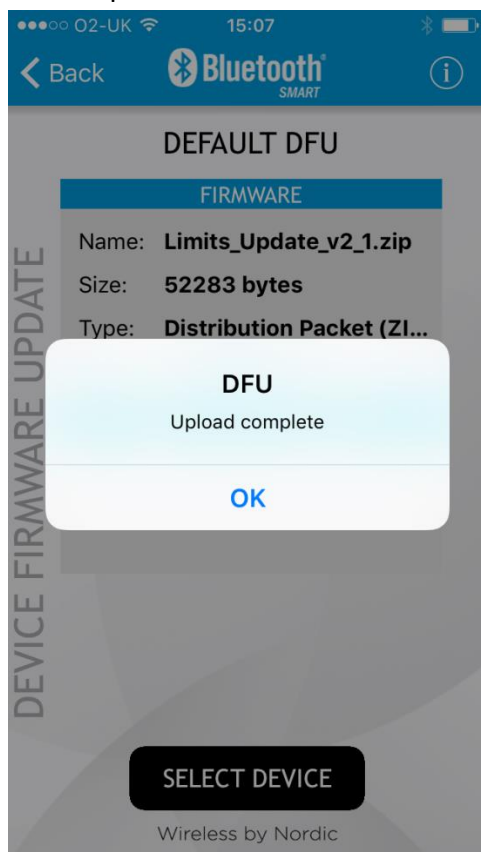

10. Your LIMITS Firmware is now updated